


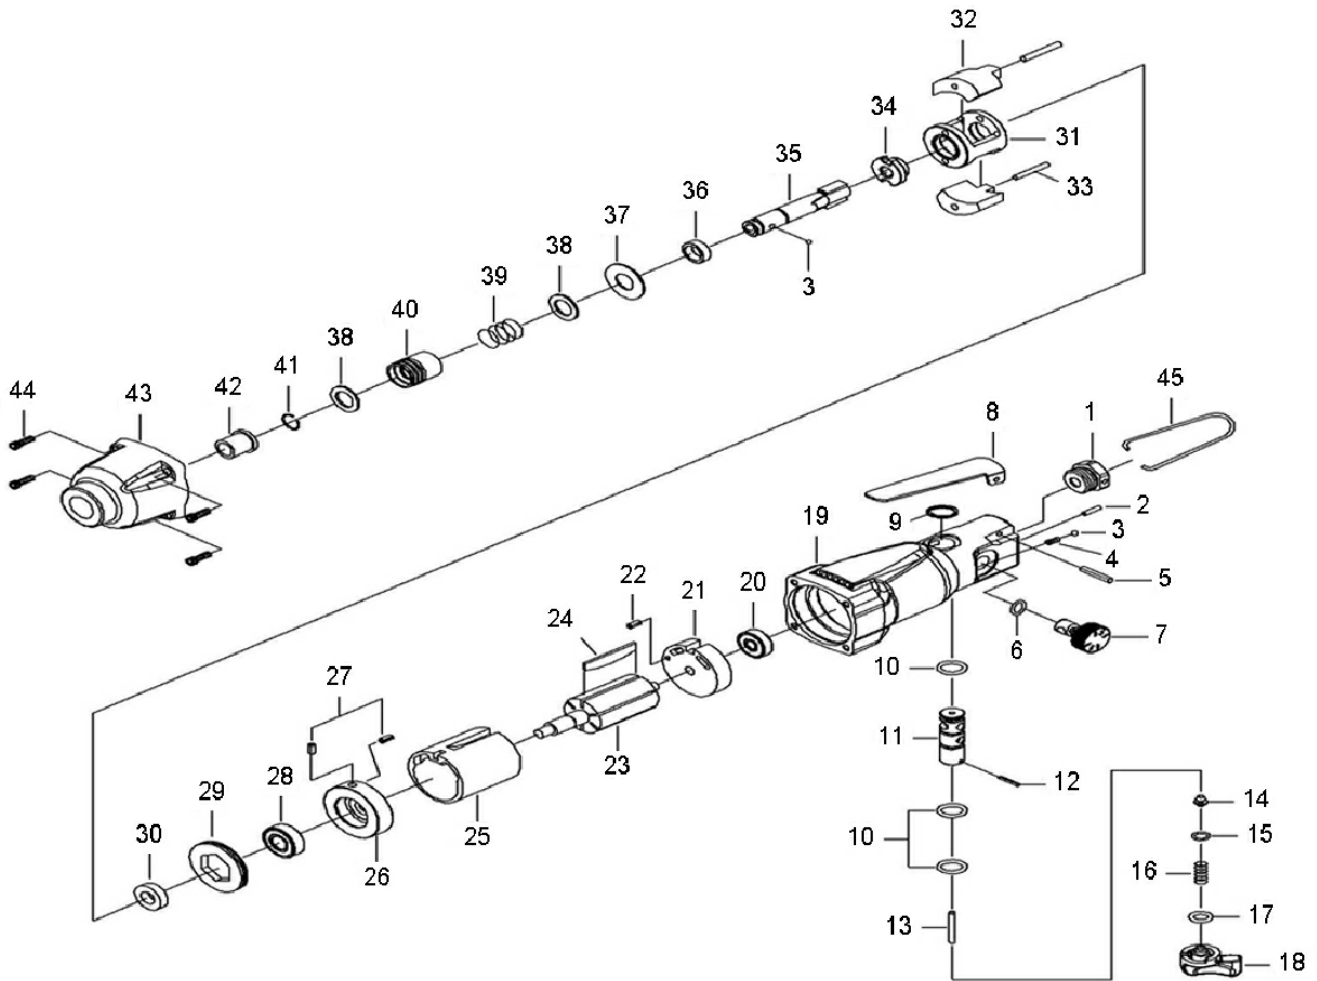

Parts List : 211000

2016.01

No.	Parts No.	Description	Q'ty
1	021101	Air Inlet	1
2	021102	Pin	1
3	021103	Steel Ball	2
4	021104	Spring	1
5	021105	Spring Pin	1
6	021106	O-Ring	1
7	021107	Air Regulator	1
8	021108	Safety Throttle	1
9	021109	Snap Ring	1
10	021110	O-Ring	3
11	021111	Bushing	1
12	021112	Spring Ping	1
13	021113	Pin	1
14	021114	Piston	1
15	021115	O-Ring	1
16	021116	Spring	1
17	021117	O-Ring	1
18	021118	Reverse Valve	1
19	021119	Housing	1
20	021120	Bearing	1
21	021121	Rear Plate	1
22	021122	Spring Pin	1
23	021123	Rotor	1

No.	Parts No.	Description	Q'ty
24	021124	Rotor Blade	5
25	021125	Cylinder	1
26	021126	Front Plate	1
27	021127	Spring Pin	2
28	021128	Bearing	1
29	021129	Top Adjuster	1
30	021130	Washer	1
31	021131	Hammer Seat	1
32	021132	Hammer	2
33	021133	Pin	2
34	021134	Cam	1
35	021135	Anvil	1
36	021136	Bushing	1
37	021137	Washer	1
38	021138	Washer	2
39	021139	Spring	1
40	021140	Ball Retainer	1
41	021141	Snap Ring	1
42	021142	Bushing	1
43	021143	Front Housing	1
44	021144	Screw	4
45	021145	Hook	1