


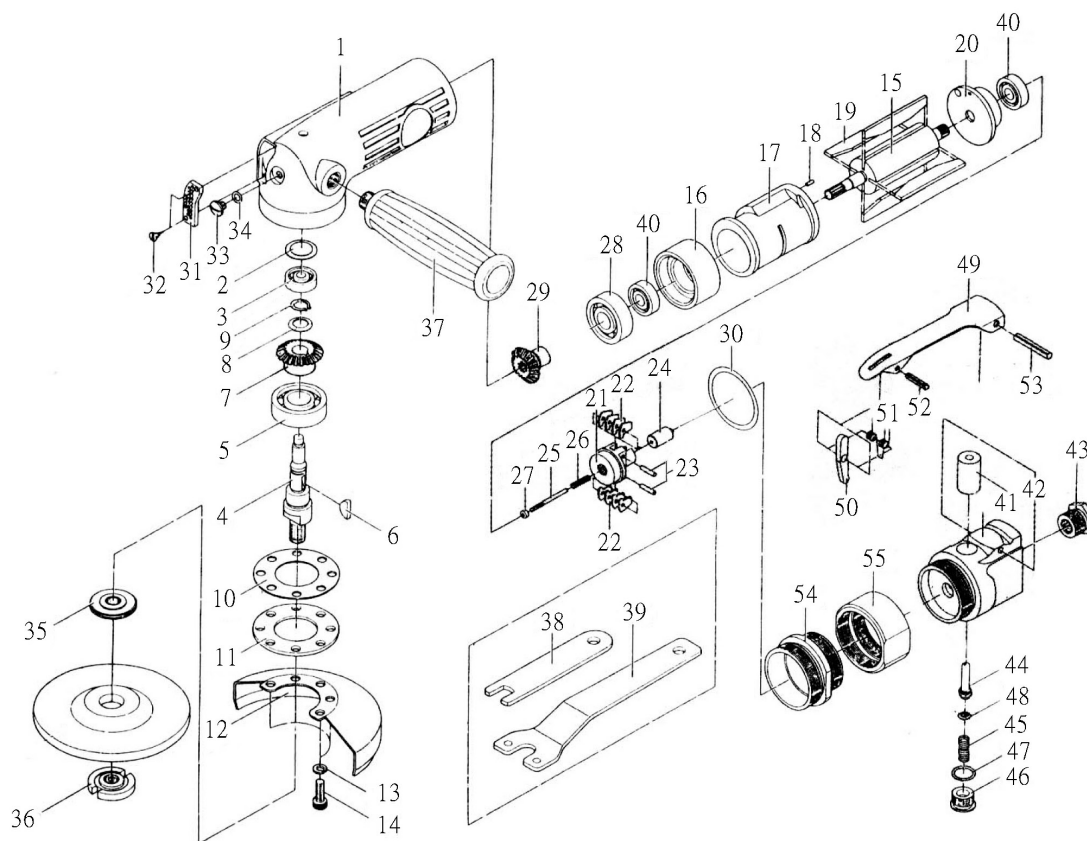

Parts List : 505506

2013.01

No.	Parts No.	Description	Q'ty
1	055501	Motor Housing	1
2	055502	Seal Plate	1
3	055503	Ball Bearing	1
4	055504	Arbor	1
5	055505	Ball Bearing	1
6	055506	Woodruff Key	1
7	055507	Bevel Gear	1
8	055508	Wave Washer	1
9	055509	External Stop Ring	1
10	055510	Gasket	1
11	055511	Retainer	1
12	055512	5" Center Wheel Guard	1
13	055513	Spring Washer	5
14	055514	Cap Screw	5
15	055515	Rotor	1
16	055516	Front End Plate	1
17	055517	Cylinder	1
18	055518	Spring Pin	1
19	055519	Rotor Blade	4
20	055520	Rear End Plate	1
21	055521	Governor	1
22	055522	Pendulum	8
23	055523	Spring Pin	2
24	055524	Plunger	1
25	055525	Adjust Screw	1
26	055526	Spring	1
27	055527	Adjust Nut	1
28	055528	Ball Bearing	1

No.	Parts No.	Description	Q'ty
29	055529	Bevel Pinion	1
30	055530	O-Ring	1
31	055531	Exhaust Deflector	1
32	055532	Tapping Screw	2
33	055533	Plug	1
34	055534	O-Ring	1
35	055535	Flange	1
36	055536	Flange Nut	1
37	055537	Handle	1
38	055538	Wrench (A)	1
39	055539	Wrench (B)	1
40	055540	Ball Bearing	2
41	055541	Throttle Valve Housing	1
42	055542	Bushing	1
43	055543	Hose Fitting	1
44	055544	Valve Stem	1
45	055545	Valve Spring	1
46	055546	Throttle Housing	1
47	055547	O-Ring	1
48	055548	O-Ring	1
49	055549	Throttle Lever	1
50	055550	Throttle Lever Lock	1
51	055551	Torsion Spring	1
52	055552	Spring Pin	1
53	055553	Spring Pin	1
54	055554	Lock Ring	1
55	055555	Coupling Nut	1